



# Privilege 3220 PNC914780592 Model P6297353

## Priv.no. 8399 Prod.Nr. 932.169-6 Program selector switch 1320671207 Replacement

Replacing the program selector - with indication of an available alternative

Written By: dieter

### INTRODUCTION

The original program selector 1320671207 is no longer available. It can be replaced, however, with the program selector switch 1243085402 - but this must be rewritten with a black edding. Would be a pity to throw away a whole washing machine when only a small plastic part is no longer available.



#### TOOLS:

- [8 mm socket wrench](#) (1)



#### PARTS:

- [TIME / Privileg: 1243085402](#) (1)

## Step 1 — Programmwahlschalter 1320671207



- First, unscrew the screws on the back of the housing cover with an 8 mm socket wrench.

## Step 2



- Second, use a narrow and flat slotted screwdriver to twist the two noses from the grip with the bar (which you grip on the handle) up and down and pull out the part (which you touch during the operation) carefully.

### Step 3



- Now we come to the actual part, the outer labeled part / ring of the program selection switch (labeled from A to N) - this is attached with a 7 mm nut. Loosen this nut with a 7 mm socket wrench.

### Step 4



- In addition, the outer part / ring of the program selector is fixed with 3 lugs (clipped). Use a flat slotted screwdriver to pry out these noses carefully and pull the labeled (outer part / ring) of the program selector switch (labeled A to N) forwards.

## Step 5



- Now take the new (outer part / ring) of the program selector with the alternative ET no .: 1243085402 and transfer the label from the old original (from the dismantled part) with a thin Fineliner (Edding) and install the whole backwards. (A is at the top.) 1. Clockwise clockwise = B; 2. Clockwise clockwise = C, etc.

## Step 6



- Should it be necessary to remove the front panel. 1. Disconnect the temperature regulator. 2. Remove the washing powder drawer. (Push the nose downwards) 3. Unscrew the screws behind the washing powder drawer, using a Phillips screwdriver 4. Remove the lugs on the left, right & top: Remove the cover

## Step 7



- Reassemble in reverse order

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.

This document was last generated on 2017-07-04 10:57:53 PM.